



APPLICATIONS IN HIGH ENERGY PHYSICS

Giving you a clear edge

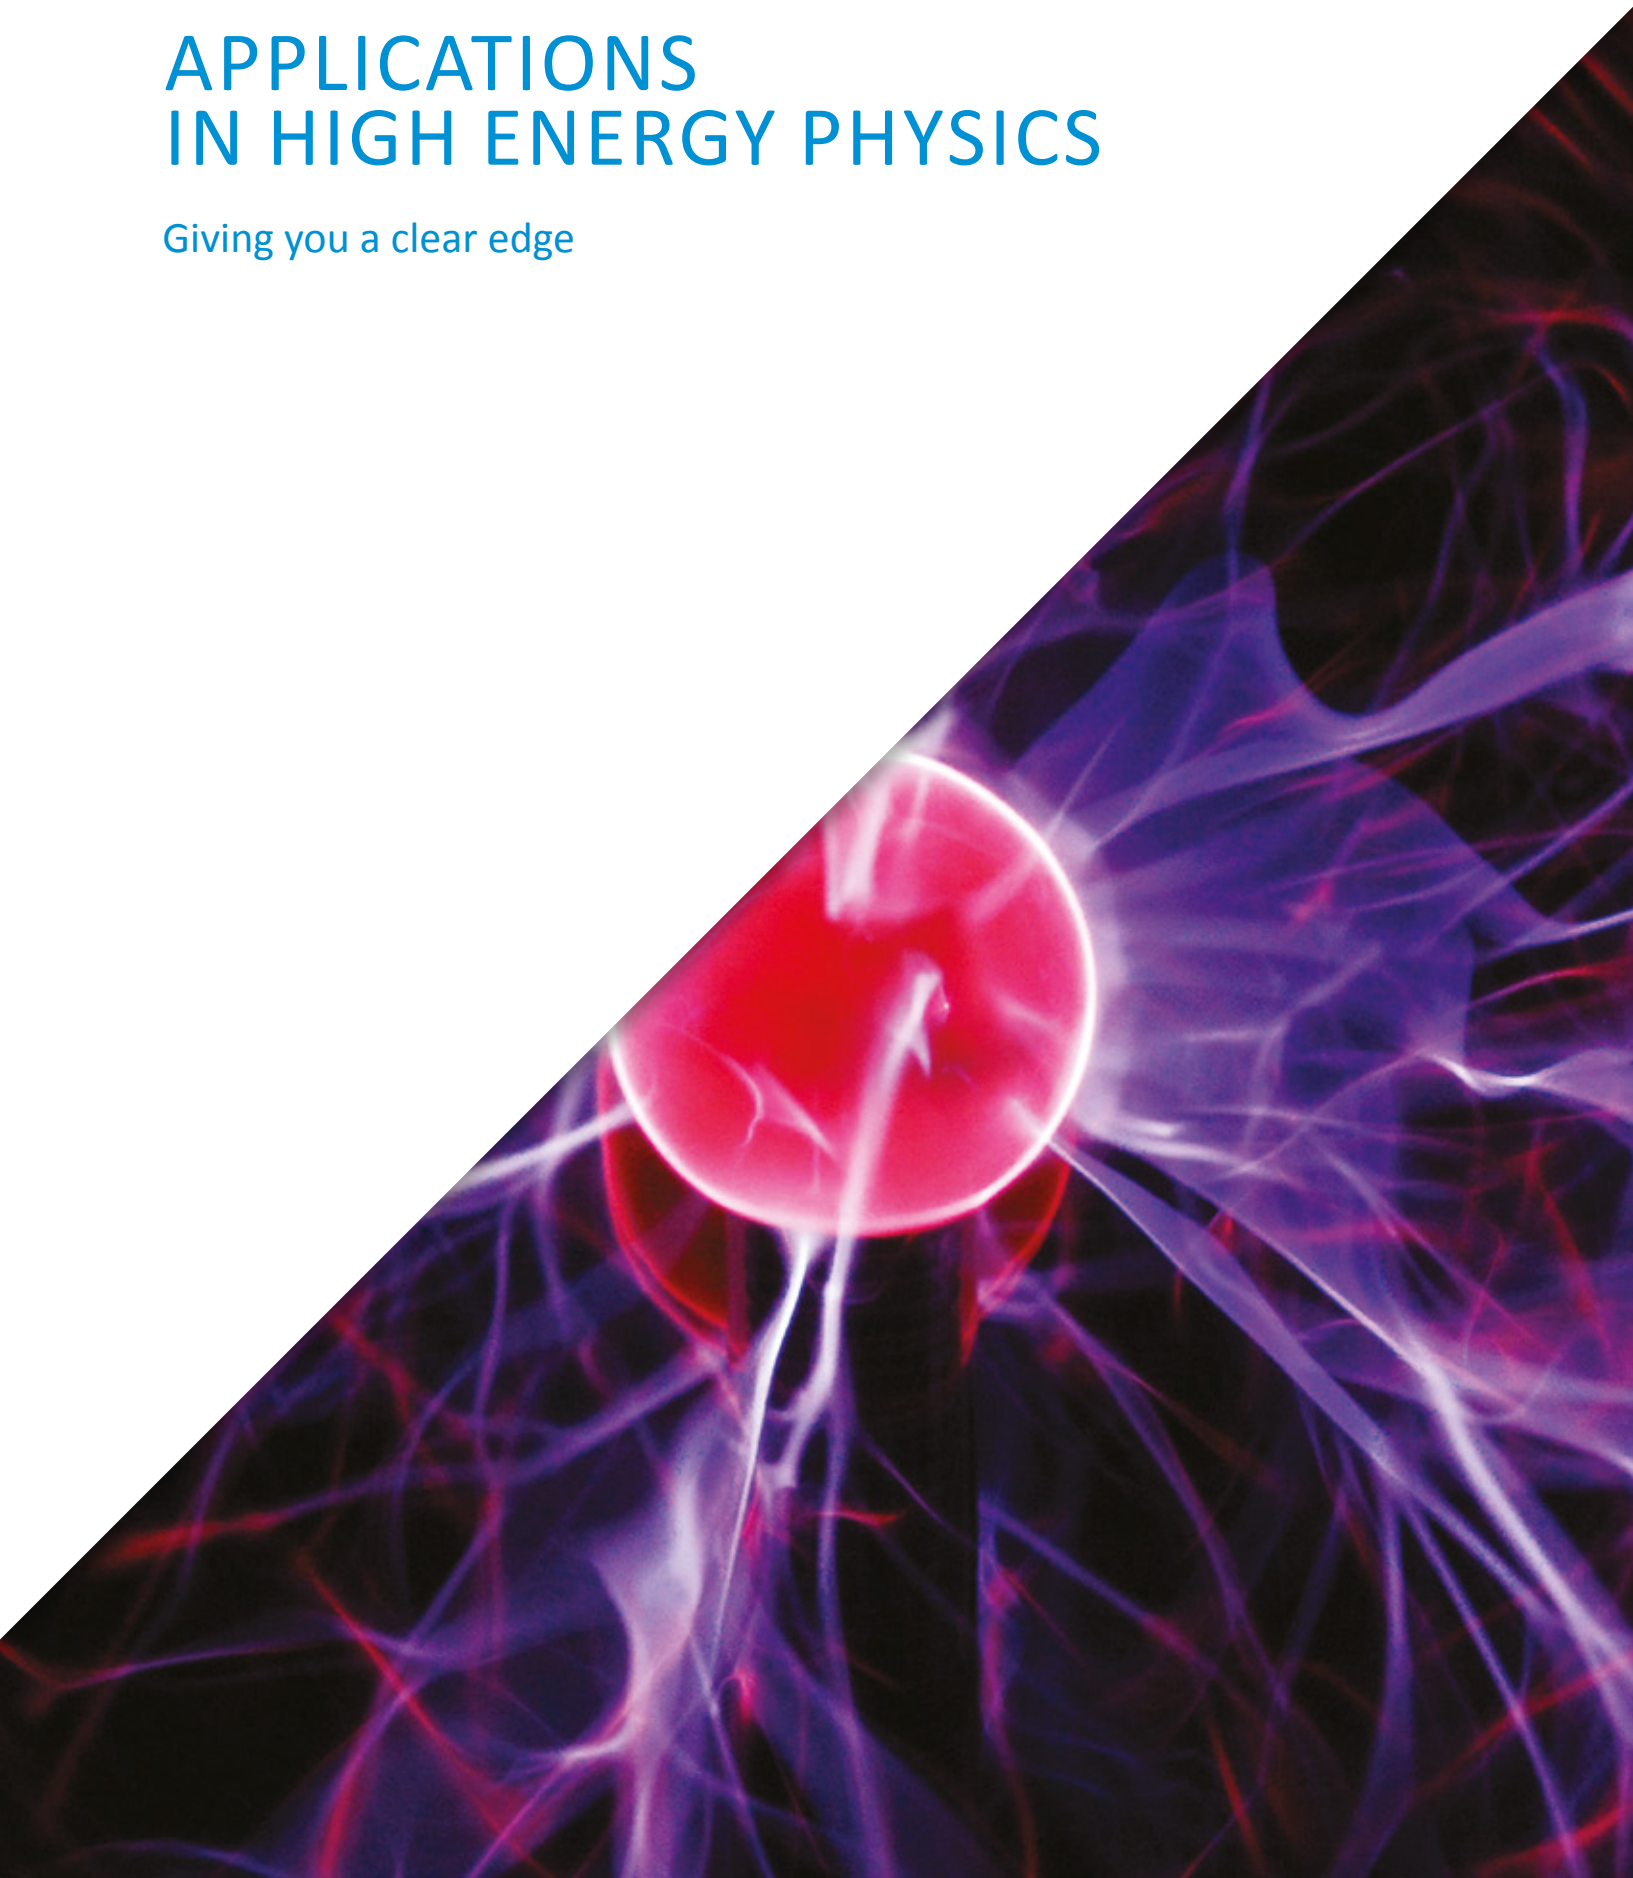

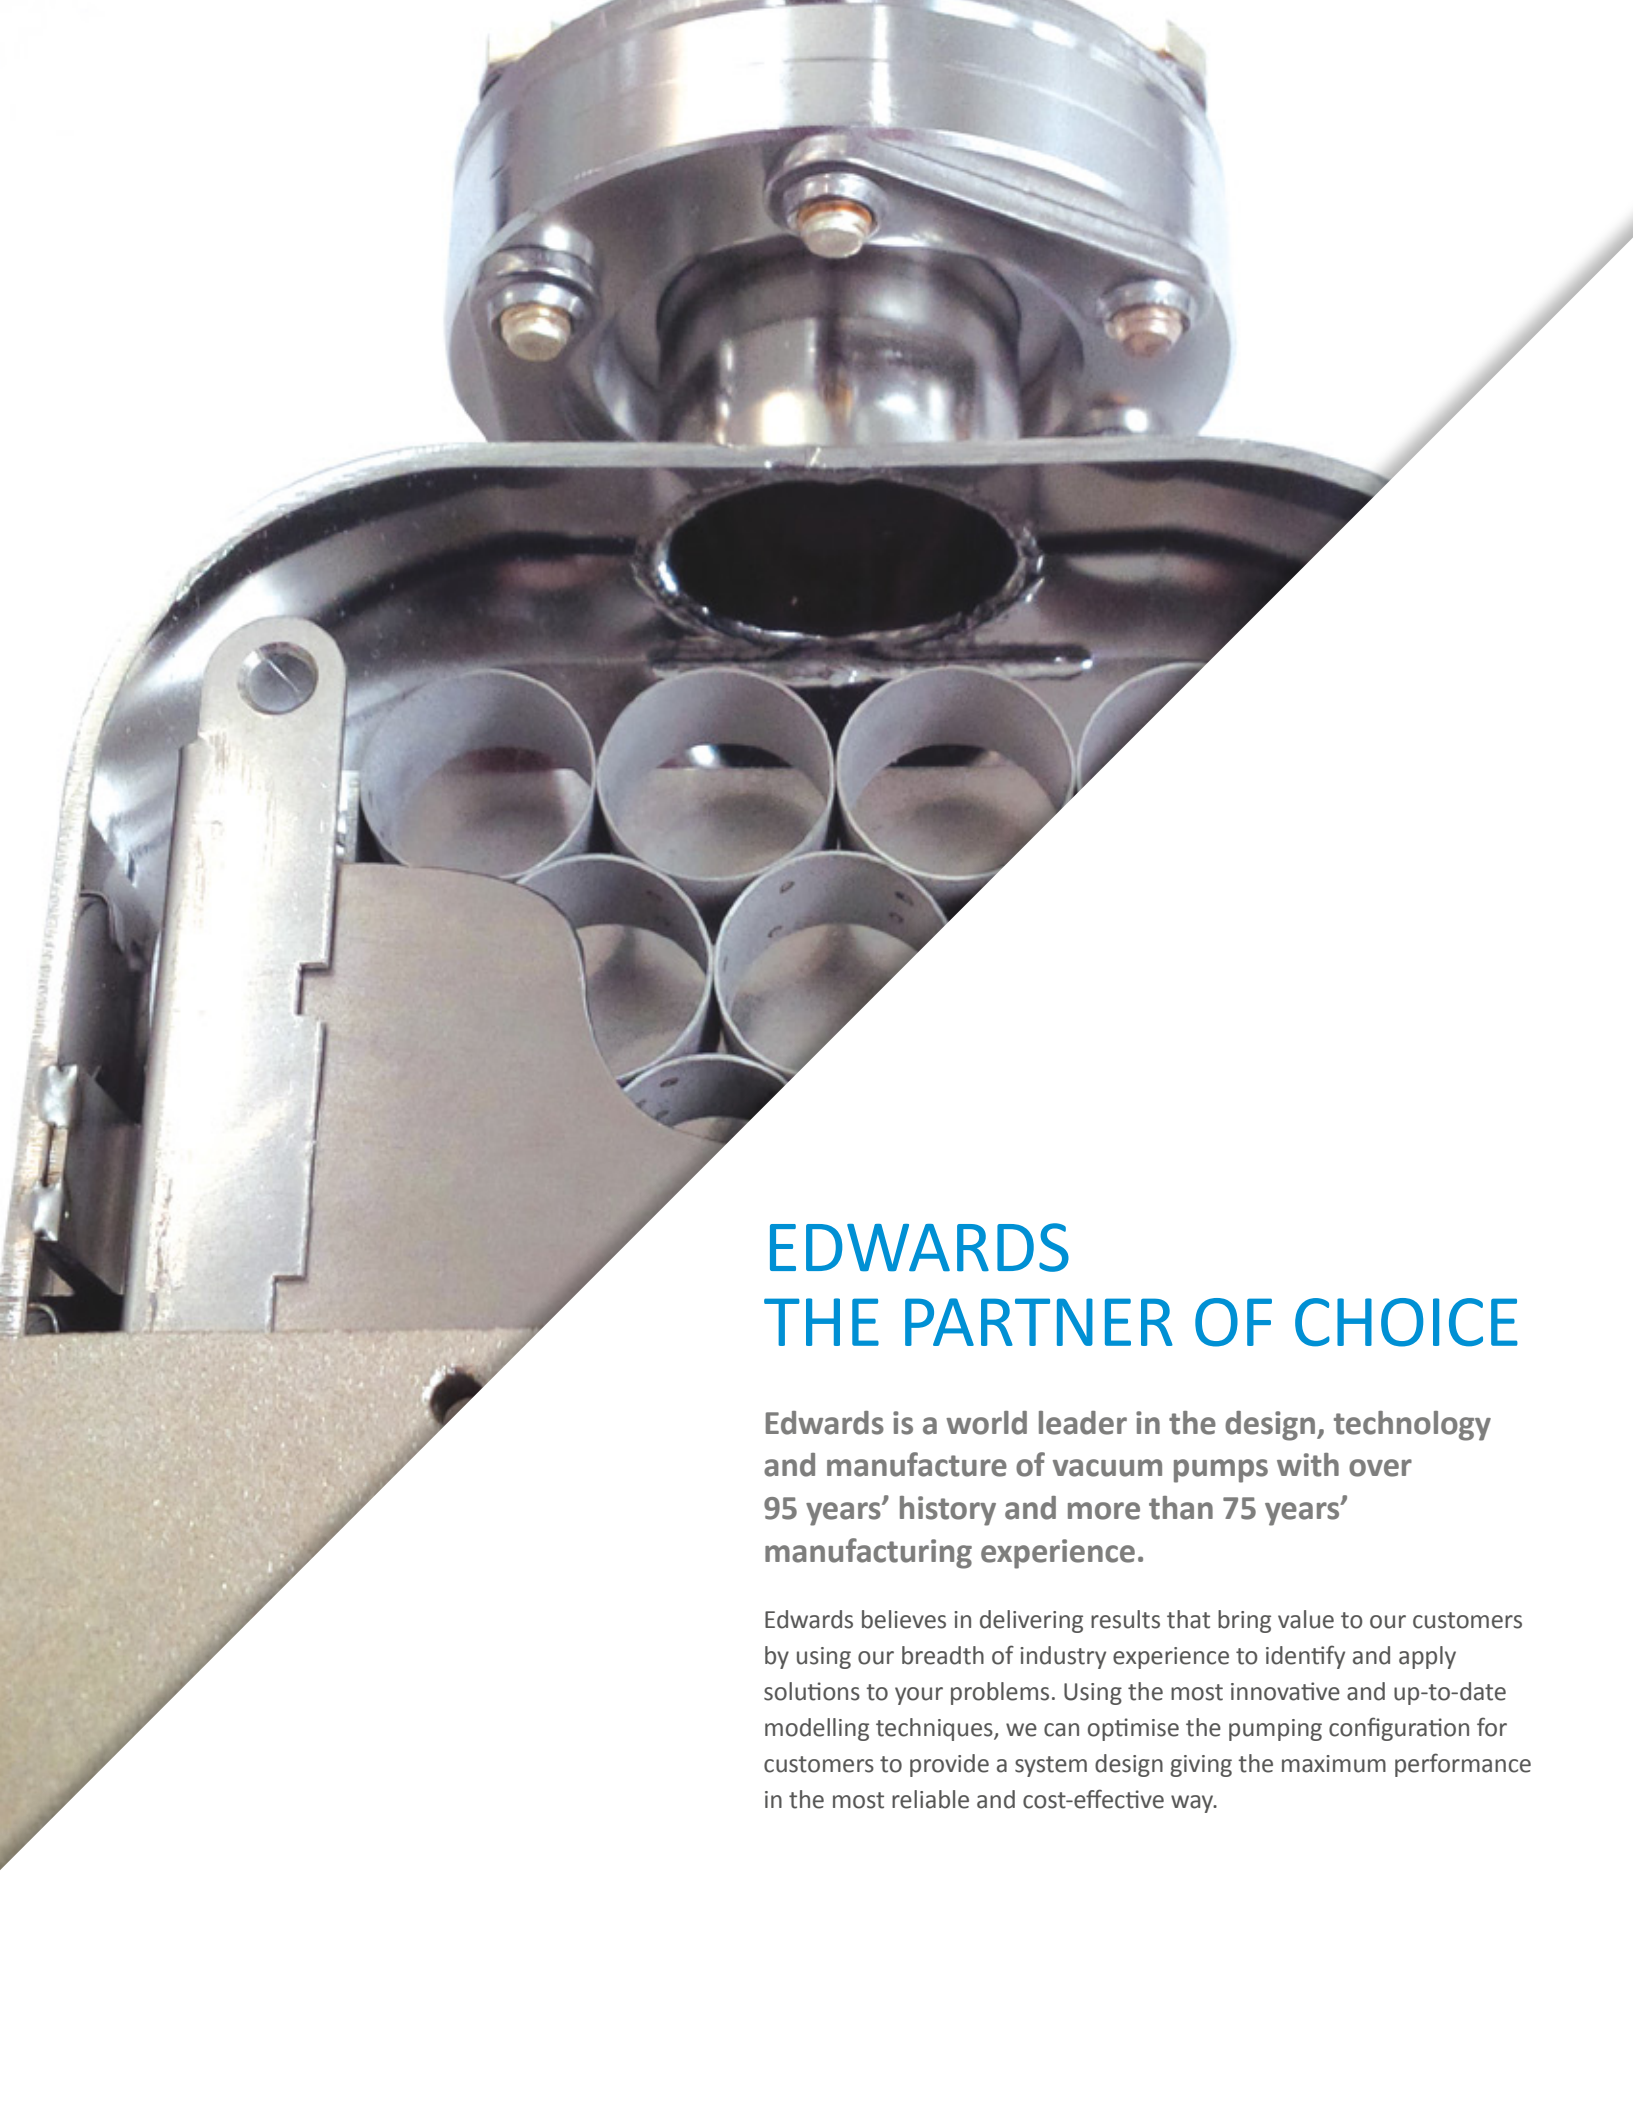

EDWARDS THE PARTNER OF CHOICE

Edwards is a world leader in the design, technology and manufacture of vacuum pumps with over 95 years' history and more than 75 years' manufacturing experience.

Edwards believes in delivering results that bring value to our customers by using our breadth of industry experience to identify and apply solutions to your problems. Using the most innovative and up-to-date modelling techniques, we can optimise the pumping configuration for customers to provide a system design giving the maximum performance in the most reliable and cost-effective way.

PERFORMANCE YOU CAN RELY ON

High energy physics is the science of the very small, the study of the fundamental building blocks of nature and the origins of the universe around us.

Research and development in the field of high energy physics is full of complexity and twists and turns, driven by the desire to understand and explain the basic constituents of matter. This has paved the way to challenging and exciting experiments, whose feasibility and success are highly dependent on the sustainability of a pure and clean vacuum environment.

Edwards, a technology leader in vacuum, has a deep understanding of high energy physics applications and the critical role that vacuum plays at every stage. This experience, coupled with class-leading products and application know-how, allows us to offer a broad range of solutions enabling you to push the boundaries of modern physics.

From the smallest school laboratory to the world's largest particle accelerators, Edwards' products and services are facilitating education, development and scientific evolution across the globe.

The widest portfolio of pumping mechanisms optimised for performance from atmospheric pressure to ultra-high vacuum

Optimum solutions, not compromises

A broad depth of application and simulation experience across the vacuum industry

Not just pumps but complete solutions

High uptime solutions with proven repeatable performance

Increased productivity and dependable reliability

SYNCHROTRON

A synchrotron is a type of particle accelerator able to produce intense beams of x-rays, infrared or ultraviolet light which can be as much as 10 billion times brighter than the sun. These beams can then be used to allow scientists to study samples of any material from metal to bacteria in incredible detail. In order to produce these high intensity beams with particles that travel at almost the speed of light, there is a need for a vacuum similar to that of outer space.

Application example:

Edwards STP maglev turbomolecular pumps have been used extensively in the **NSRRC** (National Synchrotron Radiation Research Centre) in Taiwan, one of the world's brightest synchrotron facilities. Known for their reliability and high performance, STP maglev turbomolecular pumps can help obtain the optimum vacuum required for an increased photon quality and lifetime.

Edwards have also developed bespoke turbomolecular pumping stations for **Diamond Light Source**, the largest UK funded scientific facility. Each of these stations includes a turbomolecular pump, a dry scroll backing pump, a high vacuum valve, gauges and an integrated controller. By combining these elements within a compact and mobile 'plug and play' unit, researchers can avoid the cost and space required for fixed pumps on each beamline. These turbomolecular pumping stations are used for the initial pump down of the beamlines. Gamma Vacuum TiTan ion getter pumps are then used to achieve and maintain the UHV pressures needed for operation.




NUCLEAR FUSION

Nuclear fusion is the process of combining atomic nuclei to produce a new bigger atomic nucleus. When atomic nuclei combine they release a large amount of energy, giving hope for a new source of power in the future. Research in this field largely involves attempts to recreate a reaction similar to that occurring in the sun by fusing two types of hydrogen, deuterium and tritium, to create helium. This requires considerable energy as the gas has to be heated to very high temperatures, up to 100 million degrees Celsius, causing it to become a plasma.

Nuclear fusion research, to a large extent, involves understanding the behaviour of plasma. One of the major challenges faced by scientists is the ability to sustain plasma by maintaining the right pressure. Hence the need for large-scale, effective vacuum systems that ensure ultra-high vacuum in the large reactor vessels/cryogenic system surrounding the superconducting magnetic field coils, and which can withstand very high temperatures, ionising radiation and highly magnetic fields.

Application example:

To meet this ever evolving demand, Edwards has designed and developed a special bespoke pump, based on our nEXT turbomolecular pump technology, which will be evaluated in some of the major facilities including [ITER](#) (International Thermonuclear Experimental Reactor). Equipped with a unique radiation resistant envelope around its rotor and electronics, the pump is also capable of providing an increased magnetic resistance. This, along with the flexibility of end-user serviceability, makes it ideal for nuclear research facilities.

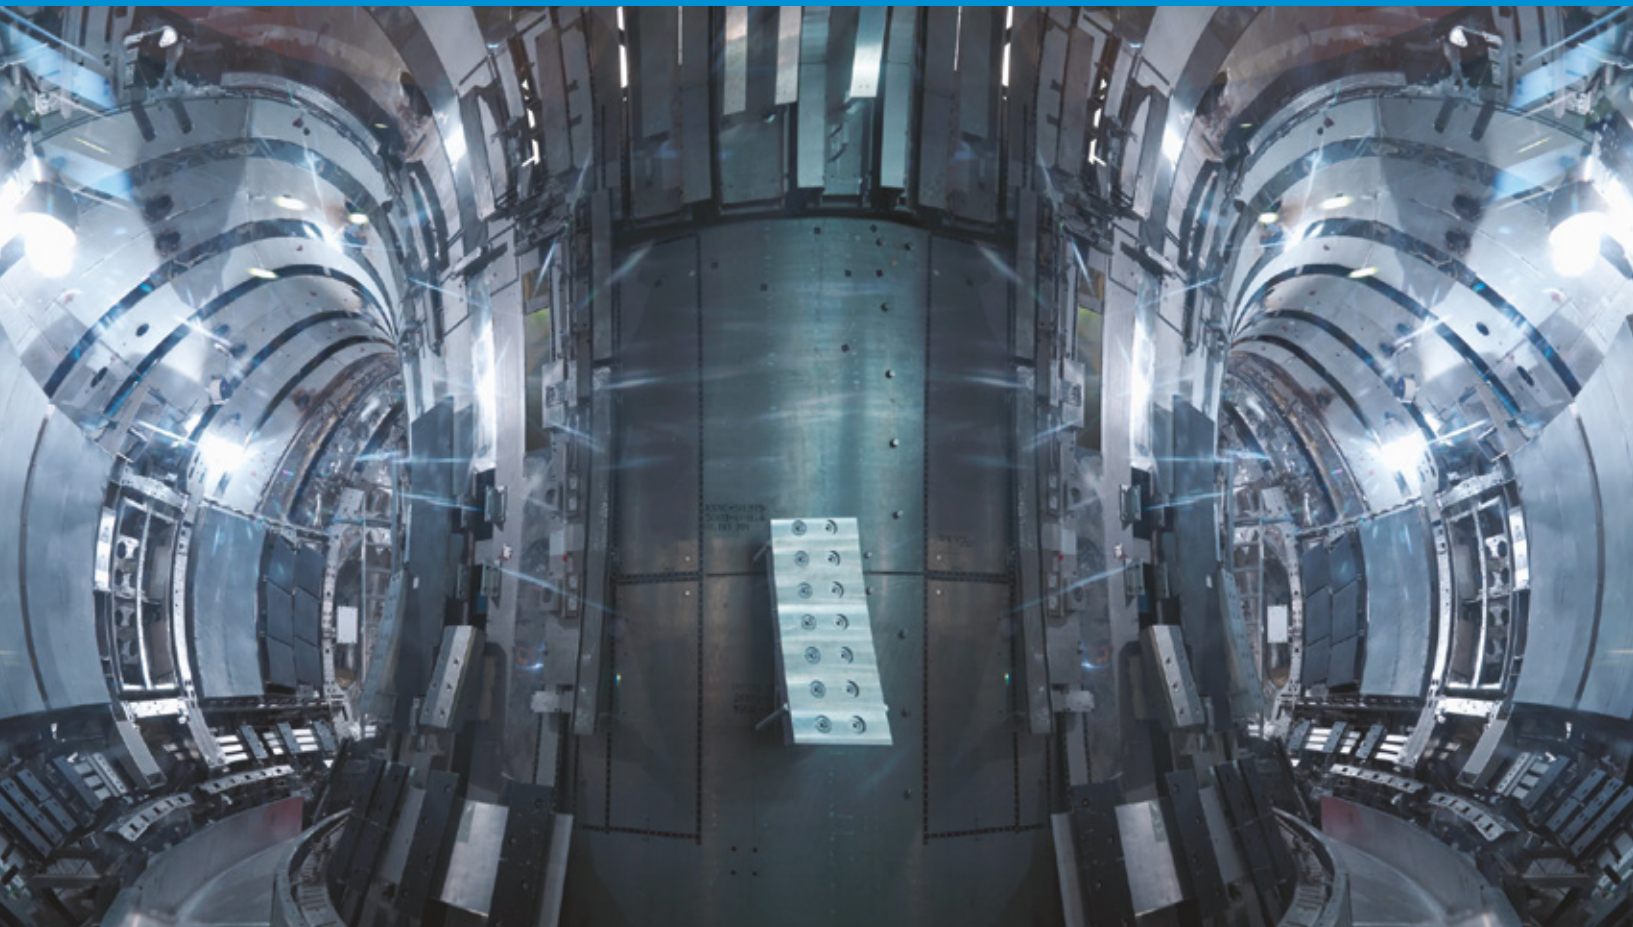


GRAVITATIONAL WAVES

Gravitational waves are ripples in the curvature of space-time which propagate as a wave, travelling outward from the source. Detecting these waves would help to confirm the explanation of gravity as predicted by Einstein's theory of general relativity. These waves propagate as vibrations in space and travel at the speed of light, which presents a number of experimental challenges to physicists.

Current efforts to detect them are by using interferometers on the ground and in space. It is essential that the observatories housing the interferometers are perfectly clean and extremely stable; the whole interferometer must remain as optically perfect as possible. Any residual gas would affect the measurements, so the light beam has to operate under an ultra-high vacuum.

Application example:

Edwards' XDS scroll pumps have been used for over 10 years by [Virgo](#) in Italy. The Virgo detector for gravitational waves has two 3km long tubes, each 1.2m diameter, which are the largest ultra-high vacuum vessels in Europe and the second largest in the world. With their innovative design and robustness, the XDS dry scroll pumps have been used for various experimental set-ups, including pre-evacuation and baking out of large vacuum chambers.

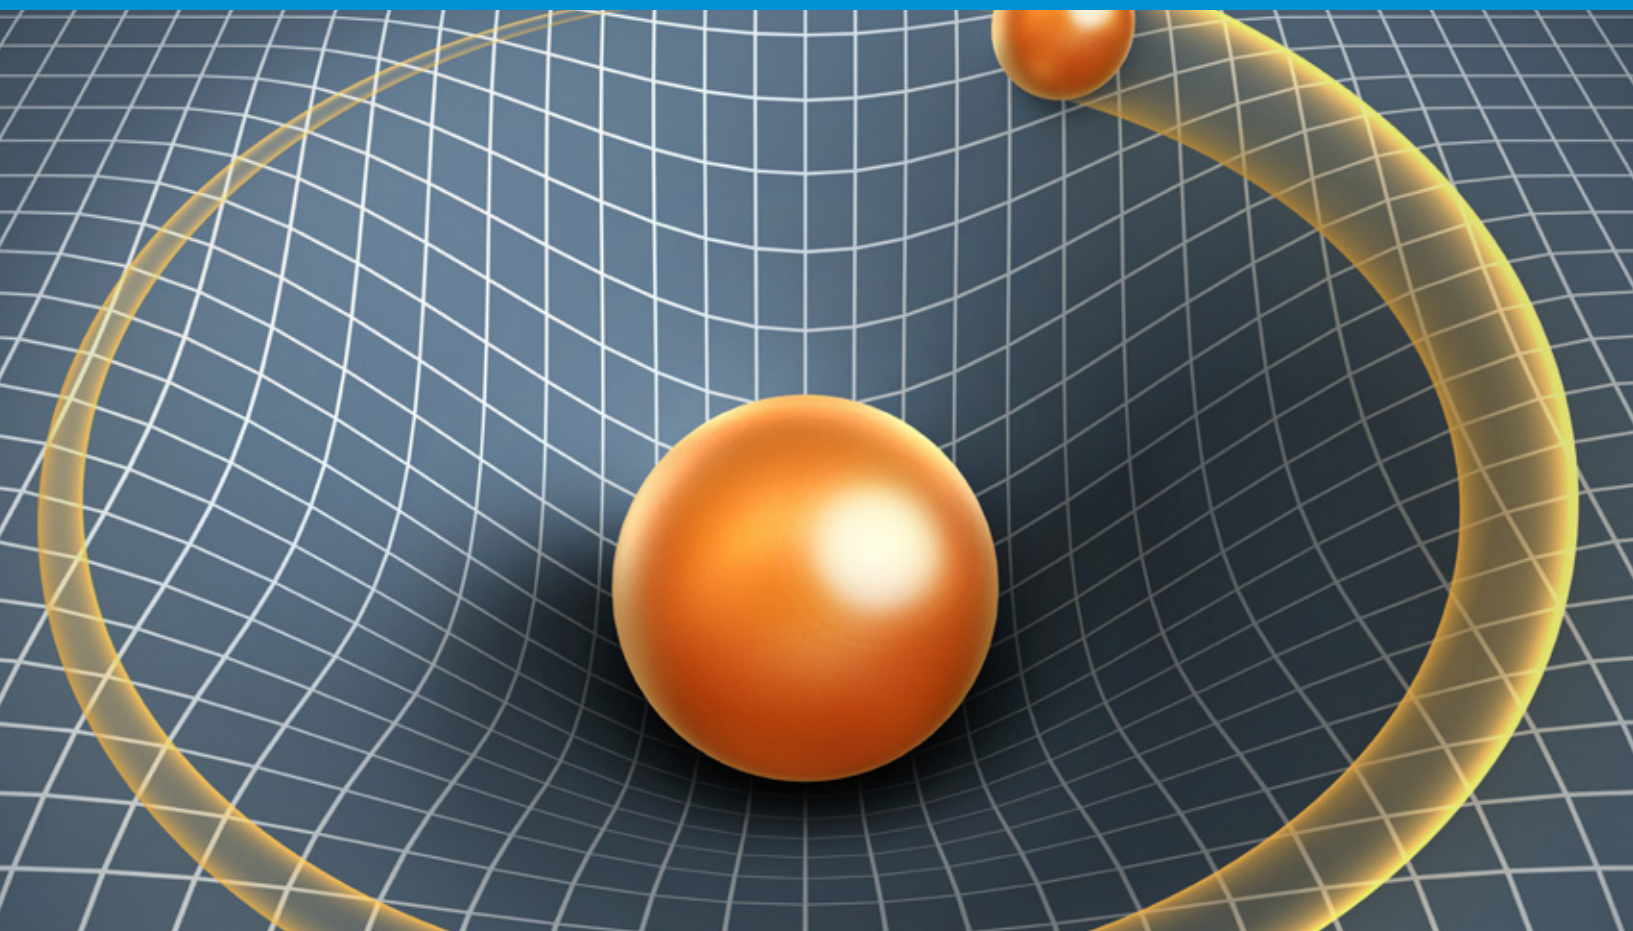

COLLIDERS

Colliders are extensively used as a research tool for accelerating elementary particles to a very high kinetic energy and letting them collide with other particles. Analysis of the by-products of these collisions gives scientists good evidence of the structure of the subatomic world. Providing the right environment for highly evacuated beam lines and chambers has always been a challenge but Edwards is a pioneer in the development of vacuum products and can offer the best solutions - we understand that operating in such extreme domains is essential for the study of successful particle physics.

Application example:

Years of experience in scientific application has helped Edwards provide vacuum solutions to **CERN's Large Hadron Collider**. Our XDS and nXDS dry scroll pumps are hermetically sealed with the bearings fully isolated from the pumping mechanism. This in turn means there are no lubricants under vacuum, eliminating the need for regular oil changes, hence reducing maintenance and eliminating the possibility of contamination which is vital for use in highly evacuated beam lines and chambers.




HIGH POWERED LASER BEAMS

High power laser beams are being increasingly used to investigate a wide range of domains from new fields in fundamental physics and gravitational physics to applications in medical science, material study and nuclear material management. These laser beams travel through multiple amplifiers to produce powerful pulses in the shortest interval possible. However, operation of these high intensity laser beams requires careful consideration in the design and building of the large vacuum systems to ensure maximum stability.

Application example:

With a wide range of skills, experience and specialisation in unique tools and techniques, Edwards has been able to provide a first-class vacuum consultancy and training service to the [ELI](#) (Extreme Light Infrastructure) project in the Czech Republic, the high-power laser facility of the European Union. Specialising in unique tools and techniques, Edwards offer a vacuum modelling capability that is the best in the industry and can help you select the right pump, pipe and port sizes to ensure that the experiments and tests conducted cater to your requirements. In this case ELI were able to use the information on required pumps to help determine the size of the building needed to house the experiment. Edwards has also helped to train the vacuum team to enable them to understand the fundamentals that will help them maintain the vacuum systems in the future.

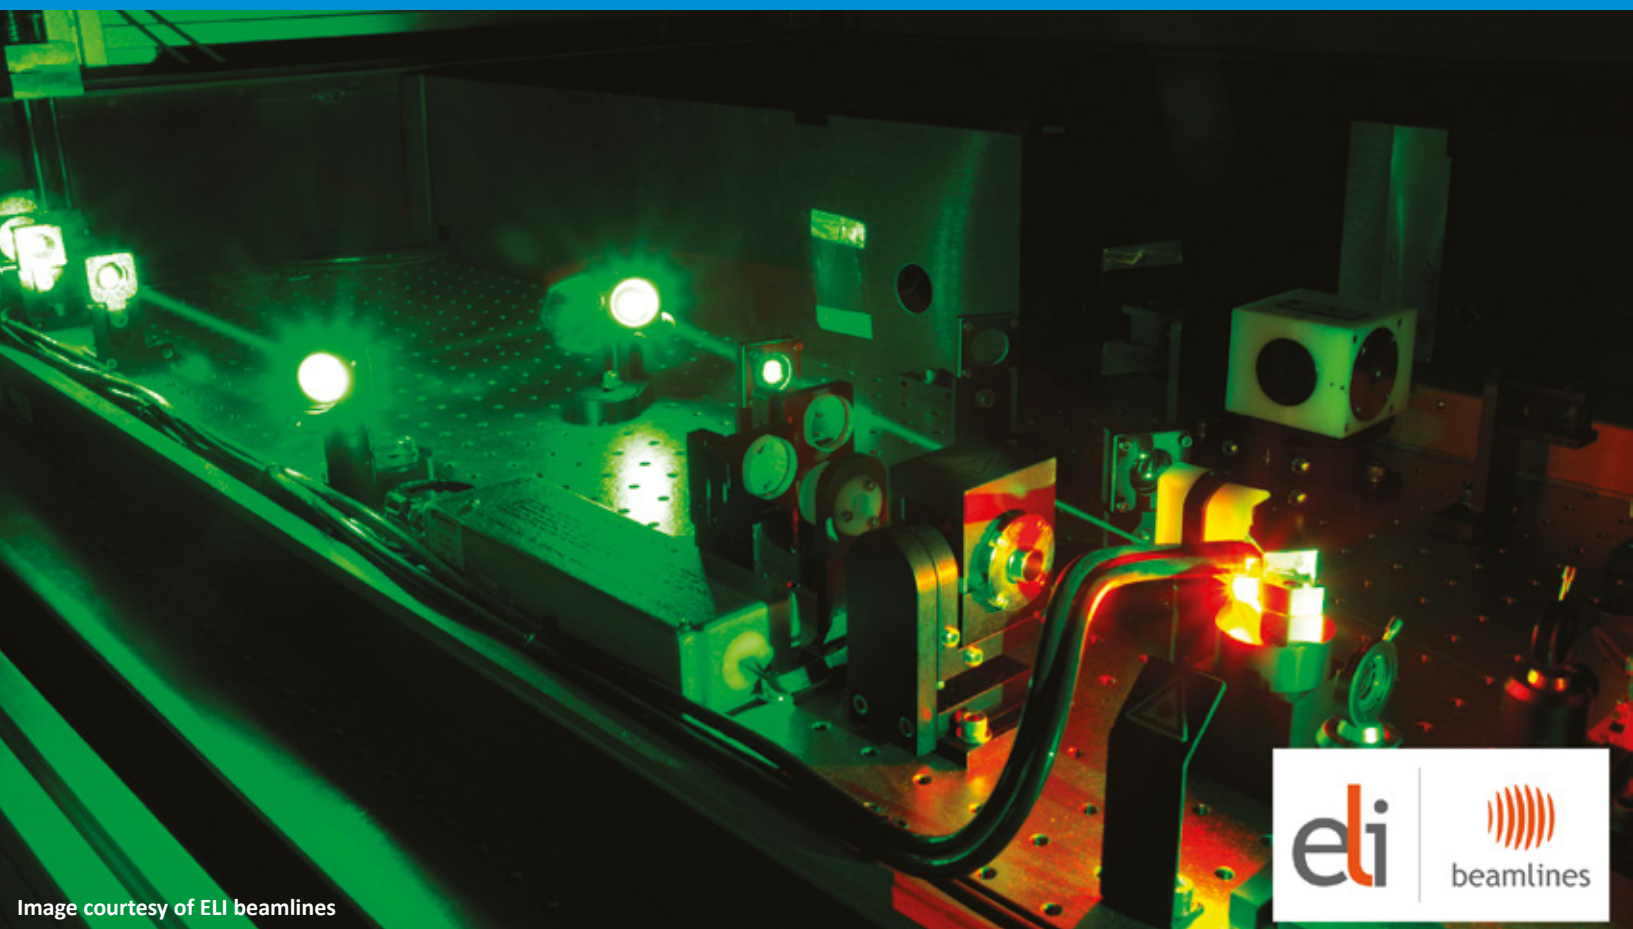

PRODUCTS

Edwards offers a broad range of vacuum products to meet the challenges presented by today's research and development laboratories. Whatever your vacuum pumping requirements, Edwards has the product solution.

nEXT Turbomolecular Pumps

nEXT turbomolecular pumps are built on decades of experience and are based on our tried and trusted EXT and STP ranges. nEXT pumps offer superior performance, reliability and end user serviceability, setting the benchmark for scientific turbomolecular pumps.



Exceptional pumping speeds and compression ratios

Superior performance

Field proven reliability in the most demanding environments

No unplanned downtime

Huge install base of turbomolecular pumps

Reliability for peace of mind

End user serviceable

Low cost of ownership

STP Magnetically Levitated Turbomolecular Pumps

Edwards STP maglev turbomolecular pumps are at the forefront of vacuum for R&D institutes and high energy physics. The multi-axis, non-contact magnetic bearing system ensures there is no risk of contamination, while minimising noise and vibration. This also means zero maintenance for most applications and low cost of ownership, making the STP maglev turbomolecular pumps the ideal choice for critical and demanding applications.



Lubricant free

For zero risk of process contamination

Ultra low noise and vibration levels

Stable process and work environment

Intelligent and easy to use controls

Simple operation

Self-adjustment and re-balancing

Zero maintenance, low cost of ownership

PRODUCTS

Gamma Ion Pumps

Gamma Vacuum, now part of Edwards, offers a wide product portfolio including ion getter pumps, TSPs, newly introduced NEGs and a range of control systems. Complementing its existing range of products, the addition of Gamma allows Edwards to offer a complete vacuum solution from atmosphere to UHV.



Vibration-free operation
Stable process

Bakeability
Clean vacuum environment

Ease of use of controllers
Simple operation

Specialised variants available
Configured to your needs

Widest portfolio of ultra-high vacuum pumps
Optimum solution for your requirements

Non-Evaporable-Getter Pumps

Newly introduced into the Gamma portfolio, a range of Non-Evaporable-Getter (NEG) pumps further extends the Edwards UHV capable product offering. NEG pumps have the capability to run without power (once activated) for extended periods of time and are particularly useful both for rapid pump-down to UHV pressures and for maintaining vacuum once achieved. NEG pumps can be integrated within an IGP for an extremely efficient pump combination.



Large gas capture capacity
Efficient pumping solution

Operate without power (once conditioned)
Pump-down and stay-down

Useful for maintaining UHV under shipping conditions
Retains system vacuum integrity

Small and compact
Can be mounted close to chamber

T-Station 75 Turbomolecular Pumping Station

The T-Station 75 turbomolecular pumping station seamlessly combines an EXT turbomolecular pump with either a dry pump or oil sealed pump and a simple controller and provides pumping speeds of 42 l/s – 61 l/s. This compact and robust turbomolecular pumping station is supplied fully assembled and ready to go for quick and easy operation.



Compact
Minimal footprint

Fully assembled
No systemisation required

Robust construction
Low cost of ownership

nEXT Turbomolecular Pumping Stations

nEXT turbomolecular pumping stations have been developed to provide a comprehensive vacuum solution with the latest technological advances for easy installation and operation. With speeds of 42 l/s to 400 l/s, and now available with the nXDS dry scroll pump, the nEXT turbomolecular pumping station enables you to configure the most appropriate combination of turbomolecular and backing pump for your application.



A wide choice of turbomolecular and backing pumps
Configured to your needs

Intelligent and easy to use controls with serial communications
Simple operation

Fully assembled
No systemisation required

Customised Turbomolecular Pumping Stations

In applications where one of our standard turbomolecular pumping stations does not fulfil your needs, Edwards also offer custom built turbomolecular pumping stations to meet your exact requirements. These can incorporate any of our EXT or nEXT turbomolecular pumps or our STP maglev turbomolecular pumps plus our full range of backing pumps and accessories.

PRODUCTS

nXDS Dry Scroll Pump

The nXDS has taken scroll vacuum technology to the next level. Improved performance, quiet operation and extended service intervals make nXDS the ultimate dry choice.



Quiet operation

Better work environment and low environmental impact

Intelligent and easy to use controls

Simple operation

Hermetically sealed for a lubricant free vacuum environment

No contamination and no oil to dispose

Long service interval and low power consumption

Low cost of ownership

Superior vapour handling

Quicker process

RV Oil Sealed Rotary Vane Pump

The RV series of rotary vane pumps are the result of more than 75 years' experience and a clean sheet design programme to produce the ultimate range of small oil sealed rotary vane pumps. These rugged vacuum pumps offer an excellent ultimate, with good pumping speeds as well as superior vapour handling capabilities and quiet operation.



Fast acting, automatic inlet valve for best in class anti-suck back protection

Safe process and systems

Mode selector and two position gas ballast

Configured to meet your vacuum needs

Superior particulate handling

High reliability

High vapour handling

Quicker process

Designed for easy maintenance

No unplanned downtime

EPX High Vacuum Primary Pump

The EPX series uses a unique, patented, single-shaft regenerative / Holweck® stage mechanism. They are ideal for applications where a better base pressure is required than can be delivered by a typical primary pump and where otherwise a turbomolecular pump and primary pump would be required and also for applications that cycle frequently from atmosphere to low pressures.



Zero routine maintenance with a 5 year service interval

Extremely reliable with low cost of ownership

No grease or oil under vacuum and presents no other source of potential contamination

Ultra clean mechanism

Low noise and vibration

Better working environment

Unique patent protected pumping mechanism

Continuous operation at all inlet pressures

Measurement and Control

We offer a wide choice of vacuum measurement and control products – from dial gauges to microprocessor based gauge controllers. Within each product range, there is a family of models designed to meet the widest user specification.



Measurement over the range 2000 to 10^{-11} mbar

Correct gauge to meet your needs

Advanced microprocessor based controllers

Robust and reliable

Certification of instruments to UK national standards available

Traceable vacuum measurement

APPLICATION TABLE

			High Energy Physics				
			Accelerators/LINAC	Beamlines & End Stations	Nuclear Fusion	Gravitational Waves	Lasers
Rotary Vane Pumps	Single Stage	ES	+	+	+	+	+
	Two Stage	E2M small	+	+	+		+
		RV	+	+	+		+
		E2M medium and large	+	+	+		+
Small Dry Pumps	Diaphragm Pumps	XDD1	✓		✓		
	Scroll Pumps	nXDS, XDS	✓	✓	✓	✓	✓
Large Dry Pumps and Systems	Multi Stage Roots Pumps	iXL120 (clean pumping)	✓	✓	✓		✓
		iXM (medium duty)	✓	✓	✓		✓
	Roots Claw Pumps	iXH (Harsh duty)	✓	✓	✓		✓
		iGX (light and medium duty)	+	+	+		+
		iH (harsh duty)	+	+	+		+
	Screw Pumps	GXS	✓	✓	✓		✓
	Screw Pumps for ATEX Environments	CXS	✓	✓	✓		
High Vacuum Primary Pump		EPX	✓	✓	✓	✓	✓
Turbomolecular Pumps	Hybrid Bearing	EXT, nEXT	✓	✓	✓	✓	✓
	Magnetic Bearings	STP	✓	✓	✓	✓	✓
	Pumping Stations	Turbomolecular pumping stations	✓	✓	✓	✓	✓
UHV Pumps	Ion Getter Pumps		✓	✓	✓		✓
	Titanium Sublimation Pumps		✓	✓	✓		✓
	Non Evaporable Getter Pumps		✓	✓	✓		✓
Oil Vapour Diffusion Pumps		Diffstaks		+	+		
		HT Diffusion Pumps			+		
		Vapour Boosters			+		
Vacuum Instruments	Measurement and Control		✓	✓	✓	✓	✓
	Leak Checkers		✓	✓	✓	✓	✓
Vacuum Hardware	Valves		✓	✓	✓	✓	✓
	Pipeline Components		✓	✓	✓	✓	✓
	Flanges and Fittings		✓	✓	✓	✓	✓
Lubricants and Sealants	Oil		+	+	+		+
	Grease		+	+	+		+

✓ Recommended technology
+ Conventional technology

SERVICE

Your business success depends on maximum equipment uptime and minimum total cost of ownership, and we constantly strive to support those objectives. As a global leader in vacuum technology and processes, we understand how vacuum pumps and systems perform in real life. Our wide portfolio of services is designed with you in mind: to help keep your processes and equipment running in the most economical and environmentally efficient manner.

Services include:

- Overhaul and repair using genuine Edwards OEM parts
- OEM spares and kits available for immediate despatch
- Remanufactured products available for cost-effective expansion and backups
- Global network of expert field service engineers available to respond quickly to unexpected equipment failures
- Extended warranty, to help manage the cost of the unexpected

Our Expert Advantage Service Plans provide you with the on-going support necessary to continuously improve your operational efficiency and meet your business objectives. As service offerings may vary slightly from product to product, please contact your Edwards representative to discuss your specific requirements.

EDWARDS GLOBAL CONTACTS



EUROPE

UK Crawley +44 1293 528844

UK (local rate) 08459 212223

Belgium Brussels +32 2 300 0730

France Paris +33 1 4121 1256

Germany Munich 0800 000 1456

Italy Milan +39 02 48 4471

USA

Niagara (toll free) +1 800 848 9800

BRAZIL

Sao Paulo +55 11 3952 5000

ISRAEL

Qiryat-Gat +972 8 681 0633

ASIA PACIFIC

China (toll free) +86 400 111 9618

India Pune +91 20 4075 2222

Japan Yachiyo +81 47 458 8831

Korea Bundang +82 31 716 7070

Singapore +65 6546 8408

Taiwan R.O.C. Jhunan Town +886 3758 1000

Publication Number: J32000895, Issue A

© Edwards Limited 2015. All rights reserved.

Edwards Ltd, registered in England and Wales No. 6124750 Registered office: Manor Royal, Crawley, West Sussex RH10 9LW, UK

Whilst we make every effort to ensure that we accurately describe our products and services, we give no warranty as to the accuracy or completeness of any information provided in this brochure.

edwardsvacuum.com

